



**1871173 K- Mini Trundle- AW**

**1871102 K- Mini Trundle- CN**


**1871186 K- Mini Trundle- AN**

**Parts and Hardware List**


A.	Base Assembly	1 pc
B.	Left Side Panel	1 pc
C.	Right Side Panel	1 pc
D.	Front Panel	1 pc
E.	Back Panel	1 pc
F.	Allen Head Bolts	8 pcs
G.	Lock Washers	8 pcs
H.	Flat Washers	8 pcs
I.	Short Phillips Head Wood Screw	12 pcs
J.	Long Phillips Head Wood Screw	2 pcs
K.	Phillips Head Screwdriver	1 pc
L.	Allen Head Wrench	1 pc

- \* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* This item is to be assembled by an adult and is not intended to be taken apart by a child.

**Hardware Illustrations**



F. Allen Head Bolt



H. Flat Washer



J. Long Phillips Head Wood Screw



G. Lock Washer



I. Short Phillips Head Wood Screw



**1871173 K- Mini Trundle- AW**

**1871102 K- Mini Trundle- CN**


**1871186 K- Mini Trundle- AN**

### **Assemble the Base Assembly and Side Panels**

#### **Parts required**

A. Base Assembly	1 pc	I. Short Phillips Head Wood Screws	12 pcs
B. Left Side Panel	1 pc	K. Phillips Head Screwdriver	1 pc
C. Right Side Panel	1 pc		

1. **Attach Side Panels (B & C)** Align the pre-drilled holes on Base Assembly (A) onto the pre-drilled holes on side panels (B & C) and secure with Short Phillips Head Wood Screws (I) by using Phillips Head Screwdriver (K). See illustration # 1.

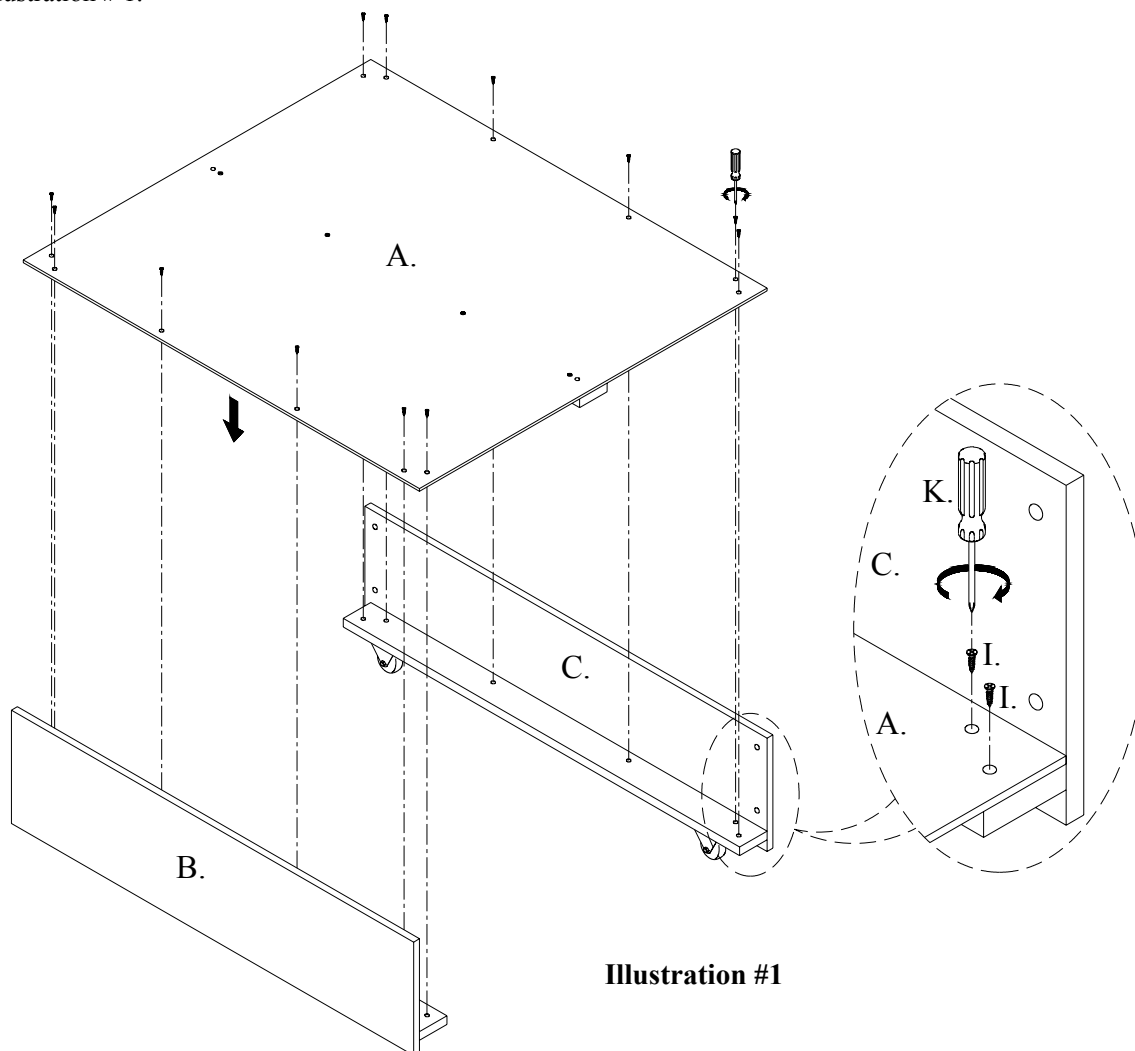

**Illustration #1**



**1871173 K- Mini Trundle- AW**

**1871102 K- Mini Trundle- CN**


**1871186 K- Mini Trundle- AN**

### **Assemble the Front & Back Panel**

#### **Parts required**

B.	Left Side Panel	1 pc	G.	Lock Washers	8 pcs
C.	Right Side Panel	1 pc	H.	Flat Washers	8 pcs
D.	Front Panel	1 pc	J.	Long Phillips Head Wood Screws	2 pcs
E.	Back Panel	1 pc	K.	Phillips Head Screwdriver	1 pc
F.	Allen Head Bolts	8 pcs	L.	Allen Head Wrench	1 pc

2. **Attach Front Panel (D) & Back Panel (E)** Align the pre-threaded holes on the Side Panels (B&C) to the pre-drilled holes on the Front Panel (D) and secure with Allen Head Bolts (F), Lock Washers (G) & Flat Washers (H) using the Allen Head Wrench (L). Repeat this step to assemble the Back Panel (E). Align the pre-drilled holes in the Base Assembly (A) with the pre-drilled holes in Front and Back Panels (D&E). Secure with Long Phillips Head Wood Screws using the Phillips Head Screwdriver (K). See Illustration #2.

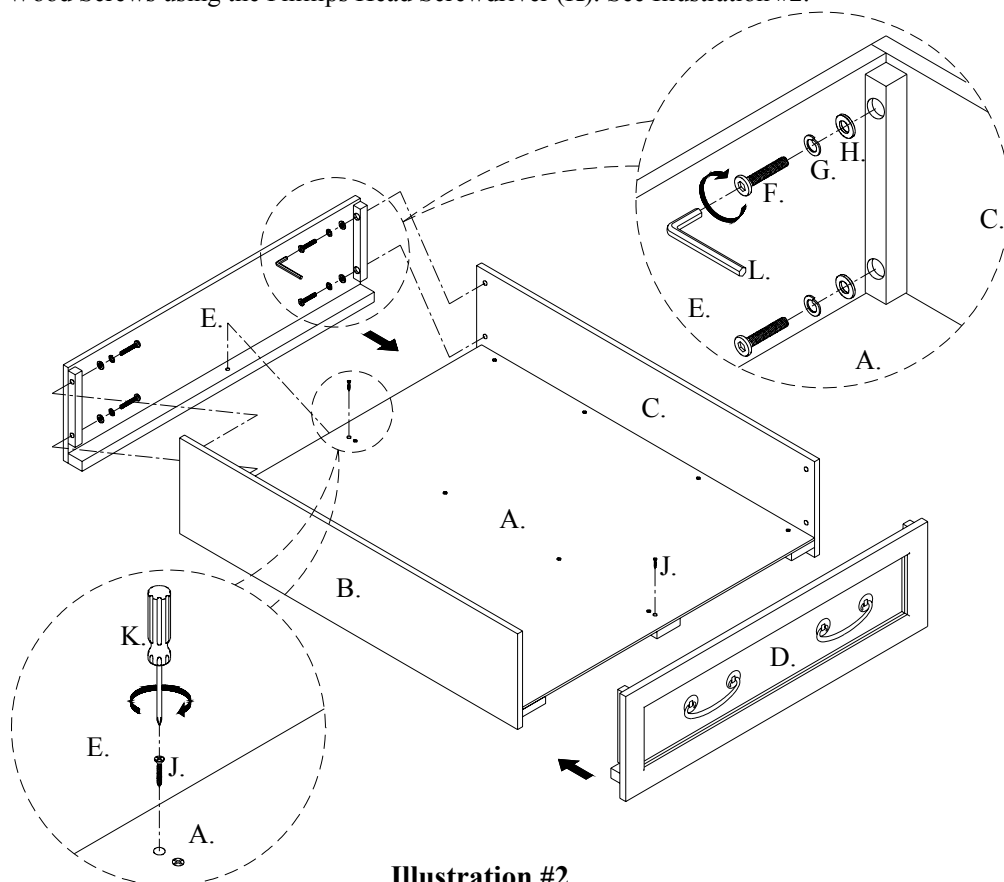

**Illustration #2**